
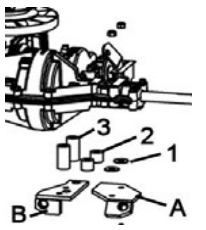
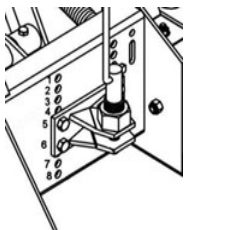
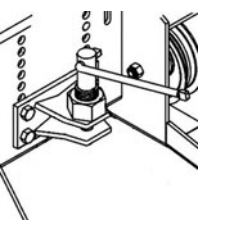
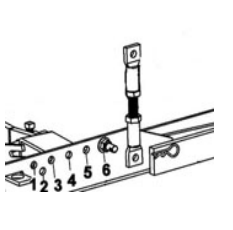
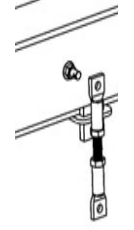



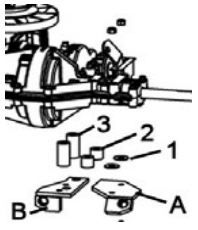
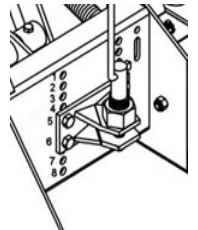
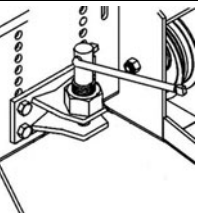
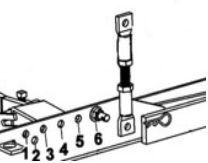



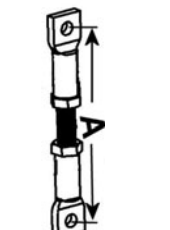

## RECOMMENDED INSTALLATION

Follow instructions as per corresponding tractor model.							
Go to specific page & step, follow instructions but apply these specific instructions mentioned below.	Page 7 & 8 Install mounting brackets with sleeves or washers.	Page 9 Attach the tiller's hitch (insert shims if required).	Page 9 Attach the tiller's hitch in the # of holes from the top.	Page 12 Install the adjustable link in the hole # indicated below.	Page 12 Do you need to drill a hole?	Page 12 Length required between the holes.	Page 13 Install the required primary belt.
<b>SPECIFIC MODELS</b>							
John Deere L120 (2005)	2-Sleeves A-Supports	2	7	1	No	6"	A-58
John Deere 145 (2006)	2-Sleeves A-Supports	0	7	1	No	5 3/4"	A-58
John Deere X540	3-Sleeves A-Supports In the 13/32" holes	0	5	5	No	—	A-62
John Deere X340	2-Sleeves A-Supports	2	7	5	No	—	A-58
John Deere X320 2008	No sleeves A-Support	0	6	3	No	6 1/4"	A-58
Columbia C.V.T. 13 AP6065597 (2006)	1-(4) Washers B-Supports	4	5	4	Yes	5 1/2"	A-53
Cub Cadet LT1046	2-Sleeves A-Supports	1	6	6	No	6"	A-53

<b>Cub Cadet LT1050</b>	1-(4) Washers and 2-Sleeves A-Supports	4	6	4	Yes	5 1/2"	A-53
<b>Cub Cadet LTX 1040 2010</b>	2-Sleeves B-Supports	4	5	6	Yes enlarged to 3/8"	5 1/4"	A-53
<b>Columbia Q94GK Cub Cadet GTX 1054 2010</b>	2-Sleeves A-Supports	4	2	6	Yes enlarged to 3/8"	6 5/8"	A-53
<b>White WLT-538 700 Series 2010</b>	2-Sleeves B-Supports Switched sides	4	3	5	Yes enlarged to 3/8"	5 1/4"	A-50
<b>Cub Cadet 2006 GT1554</b>	2-Sleeves A-Supports	4	2	4	Yes	6 1/4"	A-53
<b>Cub Cadet 2006 GT2554</b>	B-Supports	4	1	6	No, but remove the bolt in the tractor frame	6"	B-114(#104588) Not included
<b>White Outdoor 2006 LT 946K</b>	B-Supports	4	6	4	Yes	5 1/2"	A-53
<b>White Outdoor 2006 GT 2550H 14A9816K590</b>	2-Sleeves A-Supports	2	1	5	No	5 1/2"	A-53
<b>Cub Cadet 2000 Series 2011</b>	B-Supports	4	2	5	No, but remove the bolt in the tractor frame.	5 13/16"	B-118

## RECOMMENDED INSTALLATION

<p>Follow instructions as per corresponding tractor model.</p>							
<p>Go to specific page &amp; step, follow instructions but apply these specific instructions mentioned below.</p>	<p style="text-align: center;">Page 7 &amp; 8</p> <p>Install mounting brackets with sleeves or washers</p>	<p style="text-align: center;">Page 9</p> <p>Attach the tiller's hitch (insert shims if required)</p>	<p style="text-align: center;">Page 9</p> <p>Attach the tiller's hitch in the # of holes from the top</p>	<p style="text-align: center;">Page 12</p> <p>Install the adjustable link in the hole # indicated below</p>	<p style="text-align: center;">Page 12</p> <p>Do you need to drill a hole?</p>	<p style="text-align: center;">Page 12</p> <p>Length required between the holes.</p>	<p style="text-align: center;">Page 13</p> <p>Install the required primary belt.</p>
<p><b>E. H. P. TRACTORS</b> (Craftsman, Poulan, Husvarna, Jonsered)</p>							
<p>Lawn tractors with manual clutch LT-1000, etc.</p>	<p>1-(4) Washers A-Supports</p>	<p style="text-align: center;">0</p>	<p style="text-align: center;">6</p>	<p style="text-align: center;">1</p>	<p style="text-align: center;">No</p>	<p style="text-align: center;">5 1/8"</p>	<p style="text-align: center;">A-53</p>
<p>Lawn tractors with electric clutch DLT-2000, etc.</p>	<p>1-(4) Washers A-Supports</p>	<p style="text-align: center;">0</p>	<p style="text-align: center;">6</p>	<p style="text-align: center;">1</p>	<p style="text-align: center;">No</p>	<p style="text-align: center;">5"</p>	<p style="text-align: center;">A-53</p>
<p>Garden tractors with parallel transaxle GT-3000, etc.</p>	<p>1-(4) Washers A-Supports</p>	<p style="text-align: center;">2</p>	<p style="text-align: center;">4</p>	<p style="text-align: center;">6</p>	<p style="text-align: center;">No</p>	<p style="text-align: center;">6 9/16"</p>	<p style="text-align: center;">A-58</p>
<p>Garden tractors with angled transaxle</p>	<p>1-(8) Washers A-Supports</p>	<p style="text-align: center;">2</p>	<p style="text-align: center;">4</p>	<p style="text-align: center;">6</p>	<p style="text-align: center;">No</p>	<p style="text-align: center;">6 3/4"</p>	<p style="text-align: center;">A-58</p>
<p>Husqvarna GTH 2648 2007</p>	<p>2-Sleeves A-Supports</p>	<p style="text-align: center;">2</p>	<p style="text-align: center;">4</p>	<p style="text-align: center;">2</p>	<p style="text-align: center;">No</p>	<p style="text-align: center;">5.75"</p>	<p style="text-align: center;">A-62</p>
<p>Craftsman 2011</p>	<p>2-Sleeves B-Supports</p>	<p style="text-align: center;">0</p>	<p style="text-align: center;">5</p>	<p style="text-align: center;">5</p>	<p style="text-align: center;">No</p>	<p style="text-align: center;">5 1/2"</p>	<p style="text-align: center;">A-58</p>