


Manually rolling the G2 (If you need to push and not drive)

Project: Manually rolling the G2
Time to Perform: Between 1-3 minutes
No Tools Required

Before beginning any service, please be sure that the unit is positioned on a flat and solid surface.
Make sure the power key is off.

Process:

Install Temporary Power Plug in place of OPS connection

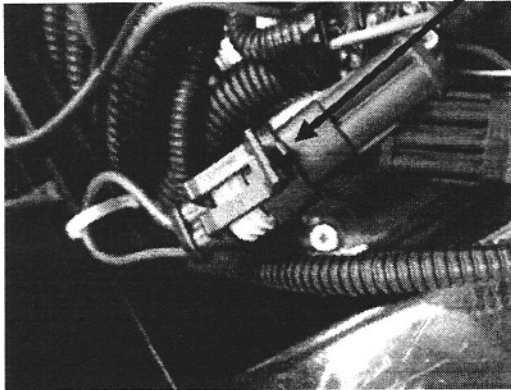

STEP 1

Open Rear cover exposing all wiring connections.

-If seat is installed, carefully remove the OPS connection and then install the temporary Power Plug in place of the OPS connection.

STEP 2

-Once connection is complete, close rear cover but do not lock. Lower seat into place.

Brake Release Switch



Machine Power LED

STEP 3

-Turn key to ON position. With the Temporary Power Plug in place, the power to the unit will be active and the LED will light up.

STEP 4

-Toggle the small round switch – Brake Release Switch – positioned on the rear of the control panel to the ON position. Its LED will light up indicating that the electric parking brake has been released.

Brake Release LED

Drive Switch...
Forward-Neutral-Reverse

STEP 5

-ENSURE that the drive control switch is toggled to the NEUTRAL or center position. **Do NOT move the unit when the switch is in Forward or Reverse.** At this time you can roll the unit easily.

WARNING

The Recharge Mower® G2 should **NEVER** be operated with the **Temporary Power Plug** in place. **Always ensure that the OPS seat plug is in place before operating this unit!**

STEP 6

-Once complete return Brake Release Switch to original position and turn OFF key. Raise seat and open rear cover. Remove the Temporary Power Plug and REconnect the original OPS plug into place. The unit is ready to operate normally from this point forward.